


NEVADA GOLD TOPPER ASSEMBLY

FIELD INSTALL INSTRUCTIONS



TO BEGIN INSTALLATION

- Center the topper assembly on the Nevada Gold Classic or Nevada Gold II machine. The topper is held on by two large magnets as shown below.

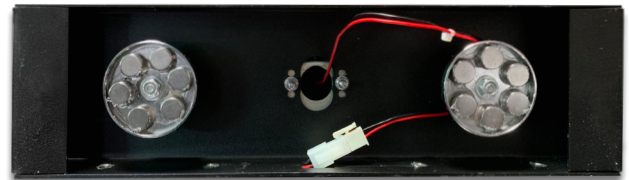

- The cables need to be secured on the back of the base. The cables may be secured to either side of the back of the topper base.



OR



The power adapter has a 6 ft cord to the topper and then a 6 ft cord to the wall outlet.





Arrow International, Inc. has made every effort to ensure that this user's manual is accurate. Information in this user's manual is subject to change without notice. Please visit the Arrow International website for the latest user manual updates.
<https://equipment.arrowinternational.com/support#manuals>




CHANGING ARTWORK

- There is one small screw that helps secure the black magnetic piece to the front of the topper.
- This screw is to be removed if the artwork is ever to be changed.

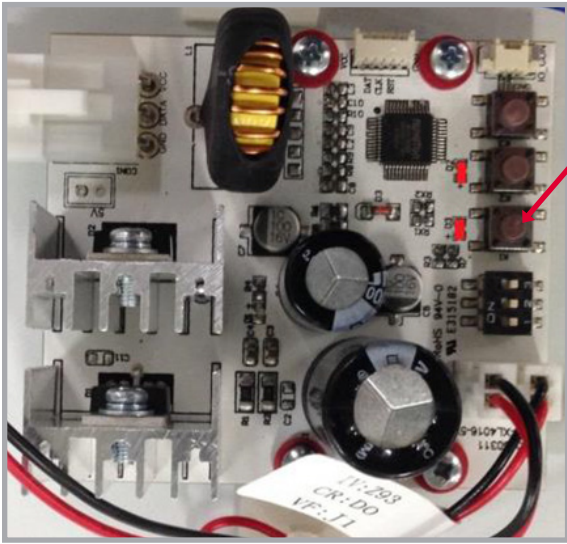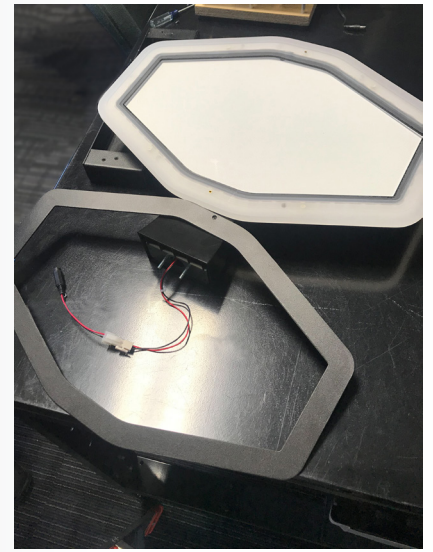

COLOR PROGRAMING

- Tap this button to cycle through the LED sequence options. Effective only when the middle button LED is *ON* which is the default setting. There are 9 sequences that can be selected to run. If the middle button LED switched to *OFF*, all 9 sequences run continuously.
- The topper stores its configuration when power is removed.
- To access the panel you must remove the two screws at the top of the topper.

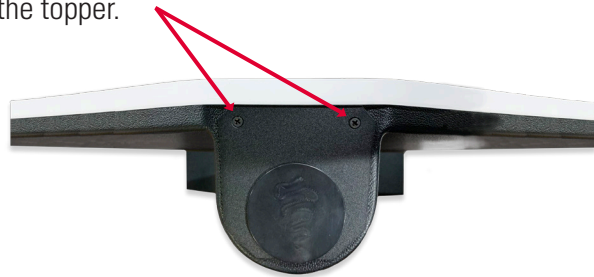

TECHNICAL ASSISTANCE CENTER

800.277.6214

SUPPORT HOURS: 8am-12am EST



HH4895V7000-MNL

© ARROW INTERNATIONAL INC.

HH4895V7000-MNL